

Hello,

Thank you for your purchase. You're not supporting some big ass corporate company, you're supporting a guy who got frustrated with the lack of options in his A110 and decided to do something about it.

A note on your bracket. They are bead blasted and finished in raw aluminium, when fitted 75% of the bracket is hidden, but if you wanted to paint them body colour, they take paint very well. These brackets are also modular, the 1/4 screw knob is compatible with action cam brackets, and camera brackets.

If you have any questions or comments, please give me a shout.

Cheers,
Aaron

A110X

Fitting instructions


Behind the A110 display, you'll see two plastic tabs. You'll need to remove these, you can either unclip them using your finger, or use a small thin trim removal tools.

Once these are removed, it'll reveal two Torx 20 screws. They might be hard to physically see, you'll feel them with your finger. Unscrew both of these, paying attention to make sure when you wind them out they don't catch on the plastic cover.

Next, get your A110 mount, choose your knob and fit it to the mount with a washer either side, screwing into the 17mm ball mount. Wind off the collar from the MagSafe mount, pop that over the ball mount and then clip the MagSafe mount on.

See this video for assembly of the A110 Mount: <https://www.instagram.com/p/DL8CeEPNTeu>

Or Scan:

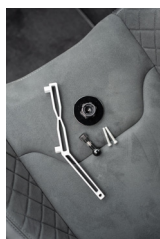

Now that you have your mount ready, and the existing screws removed, you are ready to fit the mount. Your kit comes with two screw lengths, A110's are somewhat nuanced, most take the longer, some can take the shorter. You can tell the difference between them as one set has half threads.

Pop the screws through the holes on the mount, and then snug them up into the holes that you just removed the old screws from. They don't have to be torqued tight, just snug them up.

You're done! Enjoy!

